
MINI-DOZER

Plans - Assembly Manual

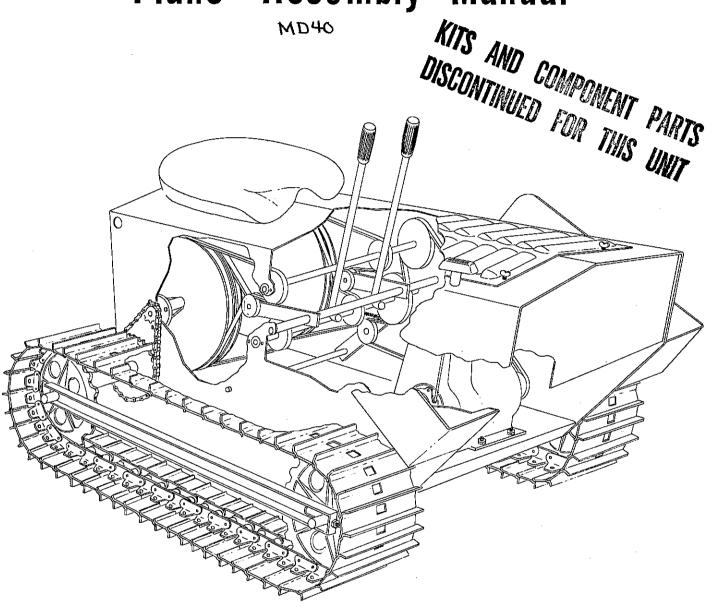



These Plans are sold solely for non-Commercial purposes and their sale in no way licenses any individual or firm to reproduce the Mini-Dozer in any form for resale. To do so will constitute direct violation of all patents applicable at that time.

To reproduce these Plans and Instructions in any form will constitute direct violation of our Copyright.

C. F. STRUCK CORP.

Key 3/16 sq x 1-144 (2) Key 3/16 sq x 2 (3) Key 3/16 sq x 3	3/16 Ring Ring	er WI 5/16 er WI 3/8	Washer WI 5/8 (30) Washer WI 7/8 (30)	Lock Washer 1/4 (12) Lock Washer 5/16 (14))	k Washer	Nut 1/4-20 (12) Nut 5/16-18 (14)	(4)	Cap Screw $1/4-20 \times 1/2$ (5) Cap Screw $1/4-20 \times 3/4$ (4)	Screw 5/16-24 x	Screw $5/16-18 \times 3/4$ (4)	Screw $5/16-18 \times 1-1/4$ (Cap Screw $3/10-18 \times 4-1/2$ (2)	Screw $3/8-16 \times 1-1/4$	Cap Screw $3/8-16 \times 3-1/4$ (2)	ew 5/1	×	Wrenc]	Pipe Elbow 3/4"		Package of all above small parts. \$8.95				complete Tracks with either style of Shoe (Lawn or Dozer)		ser Shoe) per set\$39.95
70.25 2.13 4.58	2.43	2.65	4.63 2.90 ea.	3.73 ea. 19.95 ea.	•	. /U ea. 4.05 ea.	3.95 ea.	1.70 1.65 ea.	4.00 ea.	I.63 ea.	1,35	I.10 ea. 5 20	2.20	86.	1. 13 ea.	89.95	. 43	. 28	3,73	3, 18	4.40 ea.	2.20	, 25 ea.			(Lawn or Dozer (Lawn or Dozer
Body Assembly Grill Hood	Track Expander - Right Track Expander - Left	Pivot Rod Clutch - Right	Clutch - Left Power Shaft (2)	Sprocket & Shaft (2) Rear Drive Wheel (2)	Front Idler Wheel (2)	Spacer Tube (2) Flange Bearing (2)	ing (4)	Idler Wheel - 3" 'A' x 3/8 bore Idler Wheel - 2" 'flat' x 3/8 bore (4)	- 12" 'A' x 5/8 bor	1	- 3"'A' x 3/4 bore	Pulley -3^{11} 'B' x 5/8 bore (4)	Belt - 4L500 (4)	Belt Guide, Engine	Belt Guide, Clutch (4)	Engine, H70 Lawson - Tecumseh	Clip	Spring	Front Axle	Rear Axle	Roller Chain - #40 w/connector (2)	Throttle Wire	Handgrip (2)	Track, Lawn ***(Kit comes with two	<pre>Track, Dozer</pre>	Medium Duty Tracks (Lawn or Dozer Shoe) per Heavy Duty Tracks (Lawn or Dozer Shoe) per
MD40 - AX - 3 - 4		- 11 - 12R	- 12L - 14	- 15	- 17	1 1 8	- 20	- 21	- 23	- 24	- 25	- 26	. 1 28 - 1		- 30	- 31	- 32				- 36	- 37	- 38	39	- 40	

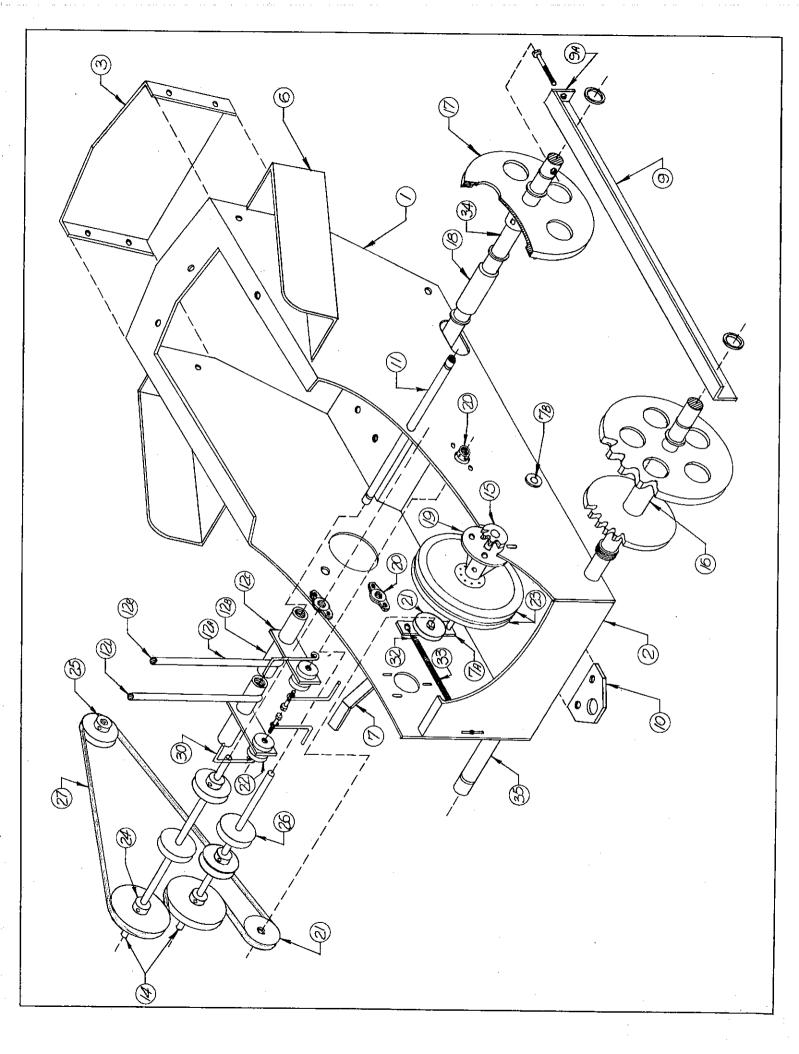

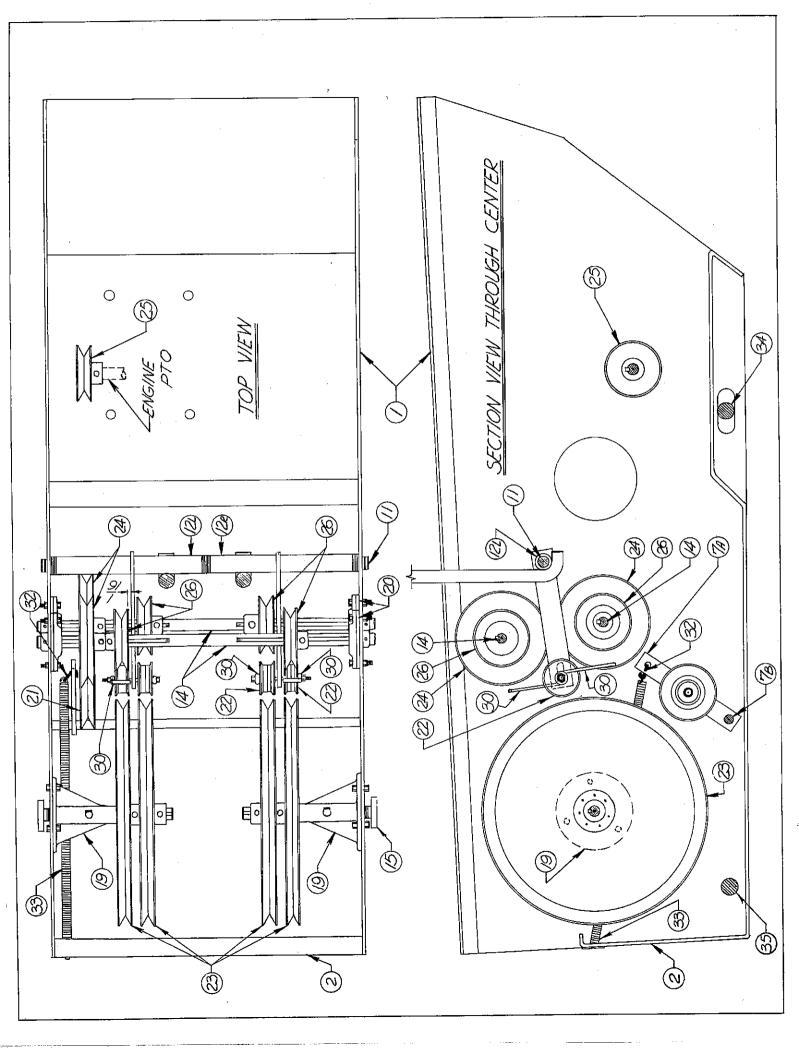

Assembly Instructions - MD40 Mini Dozer

Unpacking the KIT:

Care must be exercised in unpacking the Kit to avoid bending or scratching the various components. As the parts are unpacked lay them out neatly and check the parts against the enclosed Parts List. Notify us immediately of any shortages.

Setting up for Assembly:

It is best to set the Body in an upright position on the edges of two saw-horses or on top of a crate. This will allow you to easily work around and underneath the Dozer. NOTE: The directions 'Left & Right' and 'Upper & Lower' referred to in the following instructions are determined by standing behind the Dozer and looking forward. 'Inside' refers to the side of a part which is closest to an imaginary center line running down the length of the Dozer. 'Outside' refers to the side farthest from the above defined center line.

Lubrication:

Oil the various Oilite bearing surfaces of #16 & 17 Wheels and #19 Bearings with "3 in 1" oil as you assemble these components. Later lubricate these four Wheels and two Bearings periodically; more frequently when operating the Dozer in dusty or extremely wet conditions or snow.

ASSEMBLY:

- 1. Slide #35 Rear Axle through 7/8 holes in rear of Body. Slide five 7/8 WI Washers on each end of Axle and then follow with #16 Rear Drive Wheel and two 7/8 WI Washers over each end.
- 2. Slide #34 Front Axle through forward slots in Body. On each Axle end slide on in this order: one 7/8 WI Washer, #18 Spacer Tube, two 7/8 WI Washers, #17 Front Idler Wheel (hub to the inside), and finally two 7/8 WI Washers.
- 3. Slide #9R & 9L Track Expanders over ends of Front & Rear Axles as per assembly drawing (slotted end of Expander is forward). Slide 7/8 WI Washer over each of four Axle ends and secure with 7/8 Snap Rings. (Note: 7/8 WI Washers may be added or removed to give best possible final fit and alignment). Take 5/16-18 x 4-1/2 Cap Screw and slide on 5/16 WI Washer. Slide Cap Screw through hole in end of Expander and through hole in Front Axle. Do this to both Right & Left Track Expanders. On ends of each Cap Screw loosely apply two 5/16 Nuts with 5/16 Lock Washer between.
- 4. Take #33 Spring and attach 1/8 x 1 Cotter Pin to one end and attach the small loop of #32 Clip to the Spring's other end. Hook larger loop of #32 Clip into 5/8 hole in top of #7A Lever (Check Drawings to see that you have Spring riding close to Body Wall). Secure the Cotter Pin end of Spring by sliding through 1/4 hole in rear of #2 Rear Pan and bend ends over on outside of Pan.
- 5. Mount #19 Flange Bearings (with oilers up) against inside rear walls of Body using the three $5/16-18 \times 1-1/4$ Cap Screws provided. Use 5/16 WI Washer over each Cap Screw and loosely apply 5/16 Lock Washer and Nut on outside.

- 6. Slide five 5/8 WI Washers onto the end of each #15 Sprocket and Shaft. From outside the Body insert each Shaft into the Oilite bushings in #19 Flange Bearings. Take a straight edge and align the faces of the 54 tooth Sprocket on the #16 Drive Wheel with the 8 tooth Sprocket on the #15 Sprocket & Shaft. This alignment can be accomplished by adding more or removing 5/8 WI Washers from the #15 Shaft.
- 7. Inside Body take 3/16 sq x 2 Key and insert into keyway of each #15 Shaft. Slide single #23 Pulley over each Shaft end making sure Pulley's hub is toward the inside (toward tractor's center line) and is up tight against Oilite bushing of #19 Flange Bearing. Lock set screw on each Pulley and check assemblies on each side for smooth "slop-free" rotation. Next slide second #23 Pulley on each #15 Shaft again keeping the Pulley's hub to the inside. Lock set screws.
- 8. On each side wrap length of #36 Roller Chain around 8 tooth Sprocket on #15 Shaft and around 54 tooth Sprocket of #16 Drive Wheel secure with connector link. Draw up on Flange assemblies to tighten Chain and then tighten the three Cap Screws on each side.
- 9. Slip 3/8 Lock Washer over end of 3/8 16 x 1-1/4 Cap Screw and slide into #21 Idler Wheel. Slide three 3/8 WI Washers over end and insert Cap Screw into threaded hole of #7A Lever and tighten.
- 10. Assemble #20 Self-aligning Bearings by placing a spherical bearing unit between two stamped mounting halves and mount these assemblies to inside of Body Wall with 1/4 20 x 1/2 Carriage Bolts provided. Loosely apply 1/4 Lock Washers and Nuts to above Bolts which should protrude outside Body. Follow this assembly at all four Bearing locations.
- 11. Take Allen Wrench provided and loosen the two set screws in each #20 Bearing Unit. Check to see that Bearing Units have their hub (off-set section with set screws) on outside of Body. Slide #14 Power Shafts into these Upper & Lower sets of #20 Bearings (check assembly drawing for proper final locations).
- 12. Slide out end of Upper #14 Power Shaft. On inside end of Shaft slide on two #26 Pulleys and a single #24 Pulley (check assembly drawing to make sure you have the hub of #24 Pulley toward inside and hubs of two #26 Pulleys facing outside). Slide on two #28 Belts and one #27 Belt; then re-insert end of #14 Shaft into #20 Bearing.
- 13. Slide out one end of Lower #14 Shaft and inside slide on two #26 Pulleys and single #24 Pulley (this time hub of #24 Pulley is facing inside and hub of #26 Pulleys are also facing inside). Slide on the other two #28 Belts and re-insert end of Lower #14 Shaft into #20 Bearing.
- 14. Tighten all eight 1/4 Carriage Bolts holding the four #20 Bearings to inside of Body. Center #14 Shafts and securely lock set secrews in each bearing.
- 15. Now insert the 3/16 sq Keys in the keyways of the Upper & Lower #14 Shafts. The Upper #14 Shaft has a 1-1/4 long Key on the right and a 3 long Key on the left. The Lower #14 Shaft has a 1-1/4 long Key on the right and a 4-1/2 long Key on the left.

- 16. Now align the two #24 Pulleys with the previously mounted #21 Idler Wheel so they all have a common vertical center line; then tighten set screws. Next align the #26 Pulleys with their mating #23 Pulleys mounted on the #15 Shafts (note drawings to check that #26 Pulleys on Upper #14 Shaft align with mating #23 Pulleys mounted to the outside on #15 Shafts. Also check that the #26 Pulleys on Lower #14 Shaft align with mating #23 Pulleys mounted to the inside on #15 Shafts). Tighten all set screws. Slip #28 Belts around mating Pulleys per above alignment instructions. (Check Belt Diagram for correctness of above and at same time "thread" #27 Belt around #24 Pulleys and loop end of #27 Belt around #21 Idler Wheel.)
- 17. Assemble #12R & 12L Clutches at this time (check drawing to note difference between #12R & 12L.) Using 3/8-16 x 3-1/4 Cap Screw with 3/8 WI Washer over one end, slide into #30 Belt Guide. Follow with three 3/8 WI Washers, slide into #22 Idler Wheel and follow with three more 3/8 Washers. Then slide into slot in arm of #12R Right Clutch. On other side slip on three more 3/8 Washers, #22 Idler Wheel, three 3/8 Washers, #30 Belt Guide, 3/8 Washer and secure with 3/8 Lock Washer and Nut. (Check assembly drawing at this time to make sure you have the various parts in the proper order and that the #30 Belt Guides specifically the "hooked ends" are facing the proper direction.) Align #30 Guides so they make approximately a 90° angle with the slotted arm of the Clutch and then loosely lock 3/8 Nut.
- 18. Repeat above Step #17 with the #12L Left Clutch; again checking that the #30 Guides will be facing the proper direction in the final assembly of the Dozer.
- 19. Insert above Clutch assemblies #12R & #12L into respective locations inside Body. From outside Body slide #11 Pivot Rod through Body Wall and then through tube of each Clutch. (Check Belt Diagram for proper Belt wrapping over #22 Idlers and that #11 Pivot Rod passes through center of #27 Belt). Note that Clutches have freedom to slide back and forth on the #11 Pivot. At this time by sliding Clutches back and forth align the #22 Idler Wheels with their respective #23 Pulleys mounted on #15 Shafts. Remove #11 Pivot and re-insert using 5/8 WI Washers as spacers to hold alignment determined above. Secure with 5/8 Snap Ring on each end of #11 Pivot Rod.
- 20. Now you must properly adjust #22 Idler Wheel units you assembled above. Slide this Wheel unit rearward (or forward as the case may be) so that the Clutch control handles can move forward and backward a total distance of approximately 1-3/8" as measured in the rectangular opening of the #4 Hood. Make this travel equal in both control handles and then tighten each 3/8 Cap Screw. (Check for proper 90 angle as explained in Step #17.) NOTE: check to make sure that all four #30 Guides ride with the "hooked end" to the outside of each #28 Belt. In proper operation as the #22 Idler moves back from tightening a #28 Belt, simultaneously the "hooked end" of the #30 Guide should start to hit the backside of the #28 Belt and start to pull it in to eliminate any excessive slack.

- 21. Take Engine and slide on #25 Pulley using remaining 3/16 sq x 2 Key. Also install the two #29 Belt Guides using a 5/16 Lock Washer and 5/16 WI Washer over each end of 5/16 24 Cap Screws which are inserted into the #29 Guide's loop end and then apply a second 5/16 Washer and loosely screw Cap Screws into rear threaded holes of Engine Case. (See "Engine PTO View" drawing for proper placement.) Install Engine in Engine Compartment of Dozer keeping the gas tank forward. Mount Engine to Body's floor with four 5/16 18 x 3/4 Cap Screws coming up from the underside of the Body. Loosely apply four 5/16 Lock Washers and Nuts. Square Engine in Body (PTO should be at approximately a 90° angle with the inside Body wall) and then tighten the four Cap Screws.
- 22. Align the #25 Pulley with the two #24 Pulleys and the #21 Idler Wheel; then tighten Pulley set screw. Loop free end of #27 Belt over #25 Pulley keeping the #29 Belt Guides on the outside of Belt. Release #7 Safety Clutch Handle by moving it forward and slightly outward so that it misses engagement with the Clip (welded to Body) on its way backward. This rearward motion is caused by tension from the #33 Spring and allows the #21 Idler Pulley to move back and apply tension to the #27 Belt.
- 23. At this point rotate the two #29 Belt Guides so that the #27 Belt (when under tension) is 1/8" under the "looped end" of the two Guides. Guides should be on the outside of the #27 Belt. (Check "Engine PTO View" drawing for proper positioning of these two Guides.)
- 24. Slide in #3 Grill from the front of Body and fasten with four 1/4 $20 \times 3/4$ Cap Screws using 1/4 Lock Washers & Nuts on the inside of Body.
- 25. Attach #10 Drawbar under #2 Rear Pan with two $3/8 16 \times 3/4$ Cap Screws, Lock Washers & Nuts provided.
- 26. Mount #37 Throttle Wire through 5/8 hole in top center of Body and secure underneath with nut provided. (See Sketch "A" for proper installation of remaining end of Throttle Wire to Engine)
- 27. Pull up on Engine starter rope and tie a "Loop Knot" to keep it from retracting. Remove Handle from rope and insert rope through 3/8 hole above. Re-assemble Handle on rope end and remove knot to allow rope to recoil.
- 28. At this point check Engine manual and fill crankcase and gas tank as per instructions. Take can of "3 in 1 oil" (or similar fine oil) and generously lubricate the oilers in the #19 Flange Bearings, #16 Drive Wheels and the oilers in the #17 Front Idler Wheels. Repeat this oiling periodically to renew the Oilite Bearings oil supply. The #21 & #22 Idler Wheels and the #20 Bearings all have sealed ball bearings and are lubricated for life.
- 29. Remove Muffler from pipe extension on Engine exhaust. Replace with 3/4" pipe elbow and remount Muffler on threaded end of elbow. Tighten this pipe assembly and align muffler so exhaust gas will flow directly out the Exhaust Port in the Body's left wall. Mount #4 Hood on top of Body and secure with four 5/16 18 x 3/4 Thumb Screws.


- 30. Unroll lengths of Track Chain and assemble into two continuous Tracks by sliding the two ends together as this Chain is made to fit tightly you may have to strike the edge of one link to drive it into the "hook" of the other link. (Above assembly applies only to #55-K1 medium duty Track Chain.) On #550-K19 heavy duty Track Chain connect lengths together using connector link provided and secure with cotters. (Check to make sure that "offset" tabs on each link are offset to the outside of the Track so that the Track Shoes may bolt flatly against each link.) Loop above Chain around Front & Rear Wheels #17 & 16.
- 31. With both Track Chains in place, draw up on the two $5/16 18 \times 4-1/2$ Cap Screws to tighten the Chains, then lock in place with remaining lock washer and nut.
- 32. Now begin bolting the Track Shoes onto the Drive Chain using the 1/4" carriage bolts, lock washers and nuts provided. NOTE: Shoes must be kept square with an imaginary line running from the Front Wheel to Rear Wheel; always check this alignment as you are putting on the Shoes so that the final Track will run true. The Lawn Shoes must be bolted on with the bent ends always pointing to the inside of the Track. The Dozer Shoes must be bolted on so that the "gripping" edge of the Shoe is always to the outside and the "rolled" edge of the Shoe is to the inside and points to the rear when it's on the ground.


OPERATION:

Before starting Engine check to see that the Safety Clutch Handle (#7) is forward and engaged behind the Clip welded to Body. Next pull up and set Throttle so that Engine has sufficient gas to start - pull all the way up to choke in cold weather. Start Engine and lock Throttle setting by twisting handle 1/4 turn clockwise to hold position. Climb on the Dozer and with your right hand keeping the Control Handles in the center or neutral position, release the Safety Clutch Handle with your left hand to set transmission in motion. Now firmly holding a Control Handle in each hand you can move forward by pushing forward on both Handles; rearward by pulling back on the Handles. Make your turns by simultaneously pushing one Control Handle forward and pulling the other rearward. NOTE: All these actions should be done slowly and carefully for maximum safety and elimination of jerky motions.

NOTE:

For maximum safety both Control Handles must be held by the operator either by a single hand or with both hands while the transmission system is in motion. Therefore, with the transmission in motion the Control Handles should never be left unattended or the natural action of the transmission will cause them to occasionally bounce back and forth. If this condition takes place it can be quickly stopped by disengaging the transmission system with the Safety Clutch Handle and then re-starting.

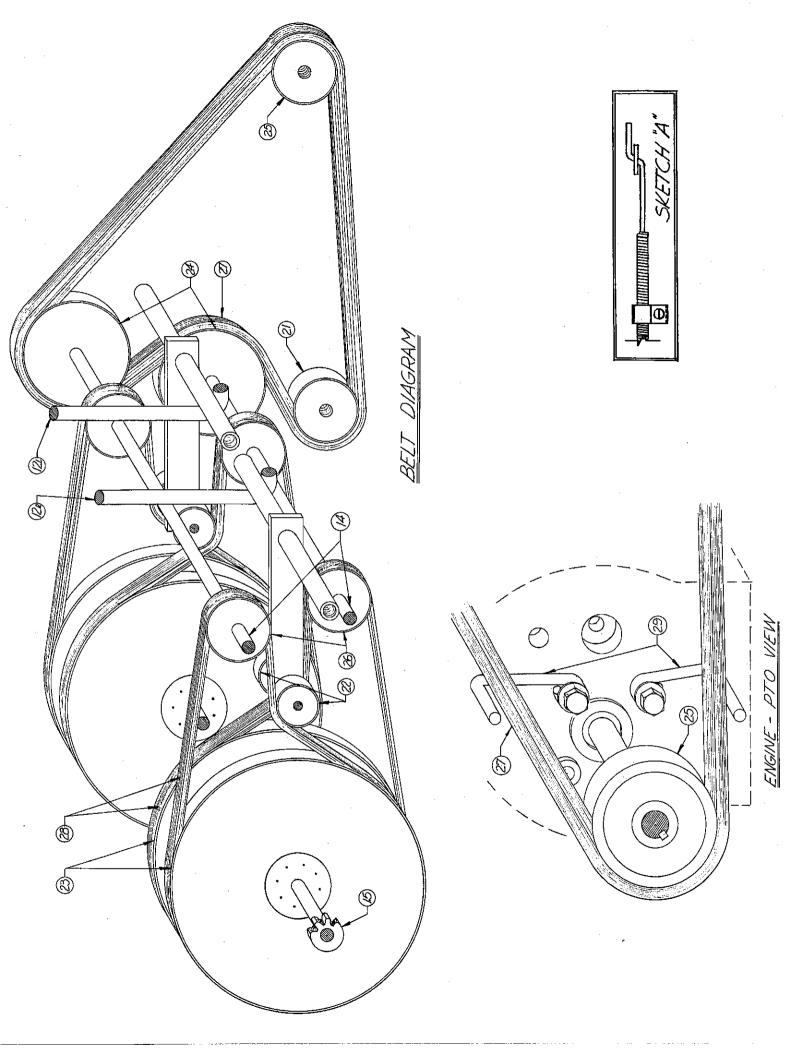


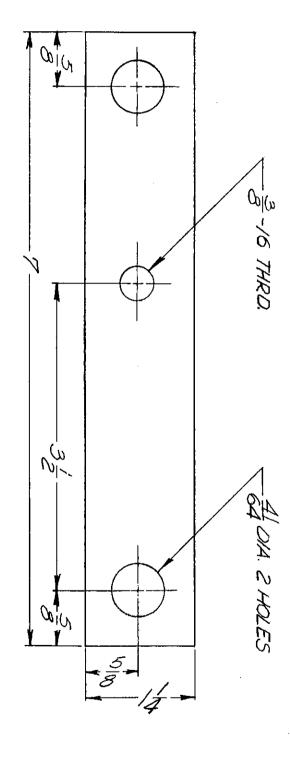

		ù			z	
*	-		12	_	NO.	
					DATE	REVISIONS
					ŧΥ	S
TRACED	125/67	SCALE	-	1 11/1015 7 7	MUHUTIA LLVLK	Ŋ
	DRAWING NO.	MATERIAL 1/4 HRS		000	ング	ググ


32 × 45° CHAMFER

æ	٨	ė,	10	-	NO.	
					DATE	REVISIONS
					₽Y	S
TRAÇED	741	DRAWNAY	C.7. U/	15 7 /	141040-	25/2
APP'D	75/13/67	SCALE	スクウハ	1101	1-18 KC	1
	DRAWING NO.	MATERIAL 1018 CRS		000	10) }

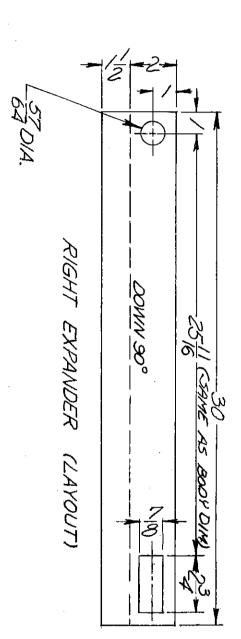



LEFT EXPANDER (FOLDED)


	REVISIONS	5	へんしん ロ バフひ	レイとでし
NO.	DATE	BY	MU40- J CAPAINCKI	TINUCK
1			1 11/1045 7)	00C
2			C. C. O. V. O. V. C	
u			DRAWN BY SCALE	MATERIAL CRS
			CHESUM DATE 1/22/67	DRÀWING NO.
UI			TRACED APP'D	·

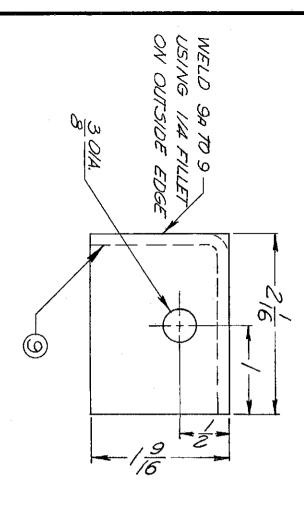


a	•	4	N	-	NO.	,
					DATE	KENDIONO
					AS	.0
TRACED	CHK'D	DRAWN BY	(./· ()	(> 7 /	14/140-	
APP'D	DATE /25/67	#CALE	1001	11101	THE TA	$\tilde{\zeta}$
	DRÄWING NO.	MATERIAL CRS	() クネイ	, ()	HIC	177

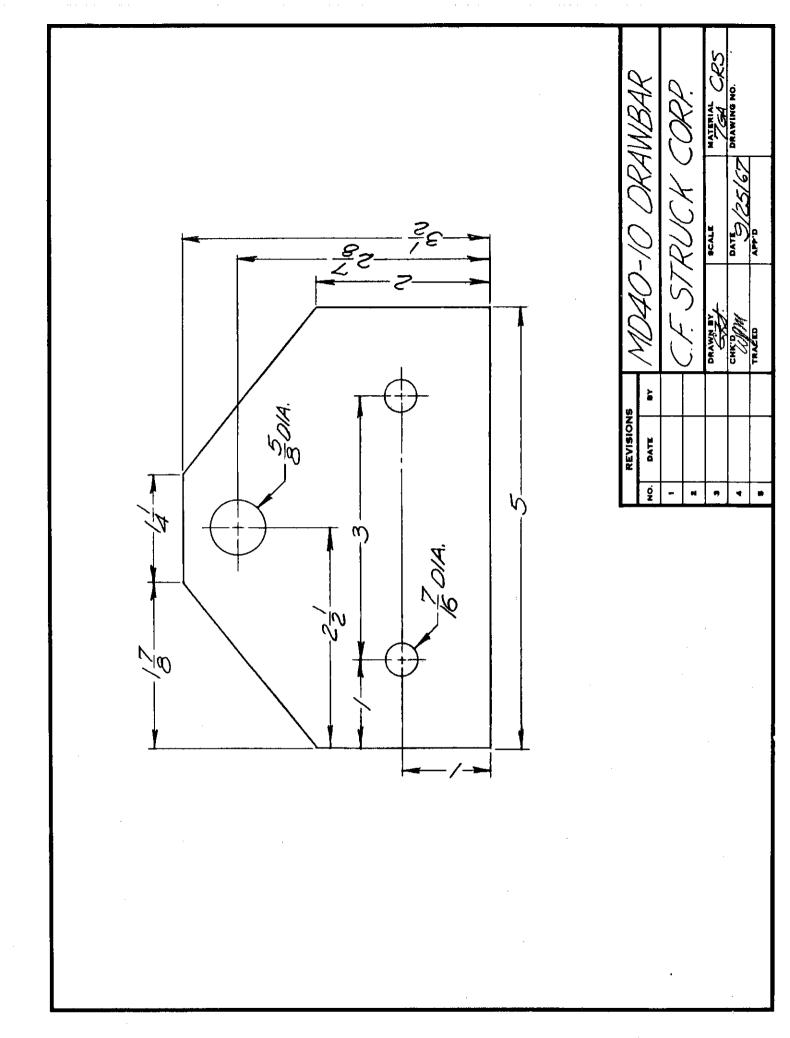

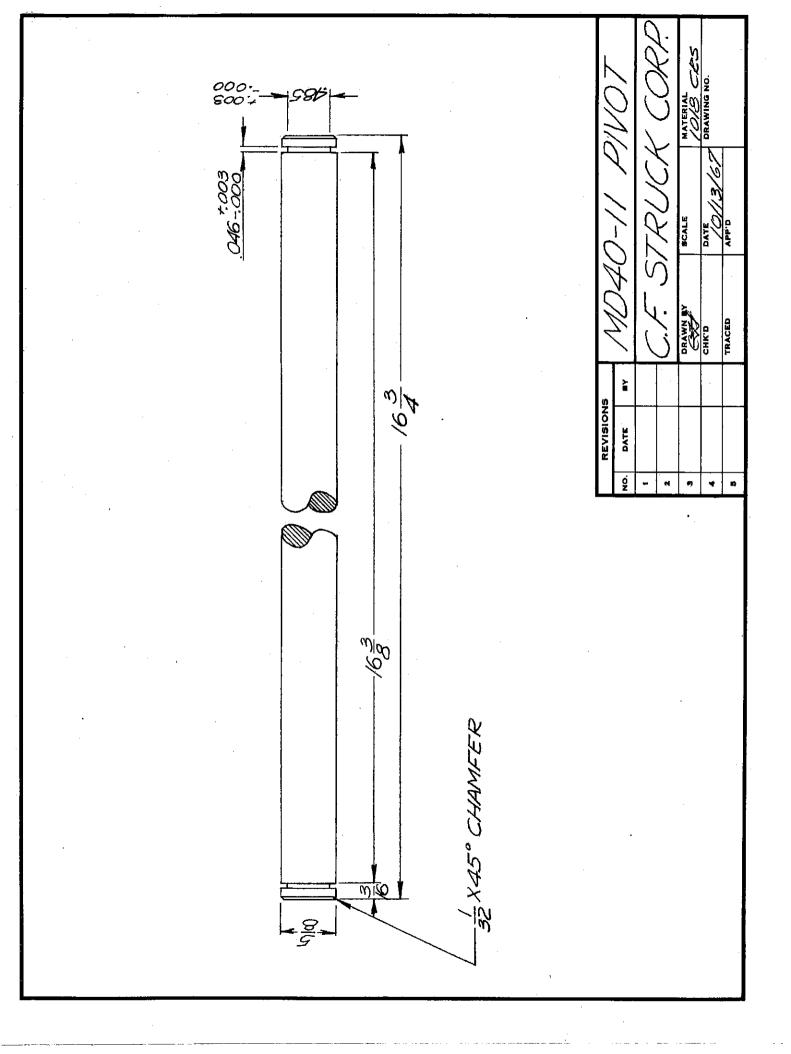


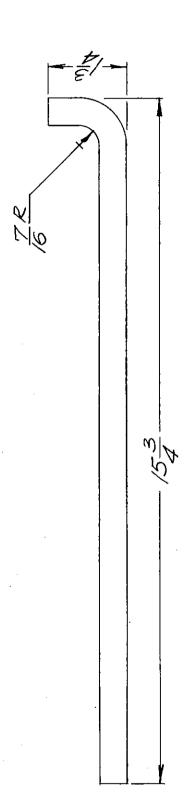


	REVISIONS	5		
Ö	DATE	٨ŧ	14040-1CA 1741VULC	
-			0000 101010 1	0
N	,		7 X X X X X X X X X X X X X X X X X X X	١.
i)			DRAWN BY SCALE MATERIAL & OPS	es
4			CHKPM DATE 9/25/67 DRAWING NO.	
II)			TRAMED APP'D	

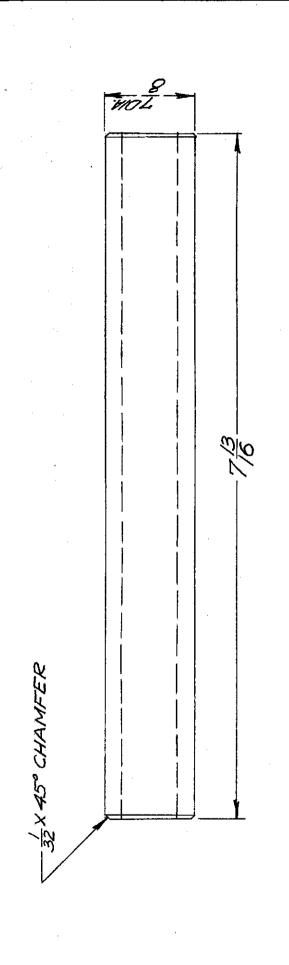



ڶ	REVISIONS	<u>n</u>		40
Ö). DATE	À.	14140-168 101	70
-			1) 1/1/01/2 1	dan,
Ø			ころくろくしてい	JK.
67			DRAWN BY SCALE MATE	MATERIAL / ZGA, WALL DOM
*			CHK.D DATE DRAW	VING NO.
EQ.			TRACED APP'D	

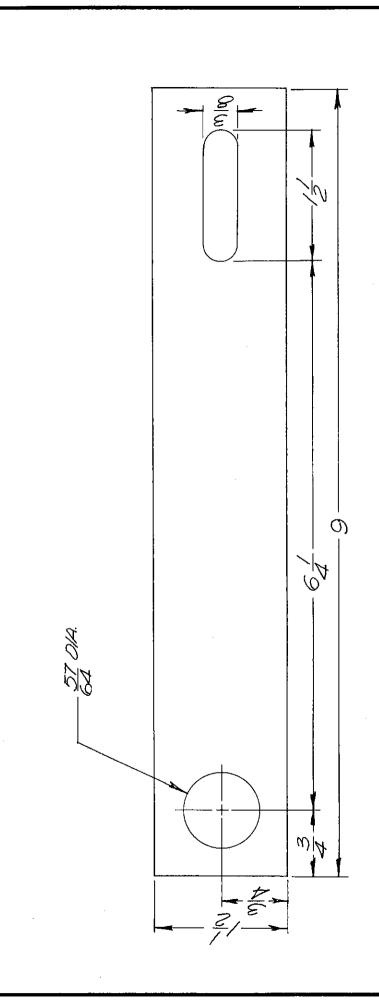


	REVISIONS	S	
Ö	DATE	AS .	MOHUTICC CCNEN
-			dans Milass 3
8			バハクしい
ΒŅ			DRAWN BY SCALE MATERIAL /4 HPS
4			CHKIPM DATE 9/25/67 DRAWING NO.
10			TRĂCED APP'D

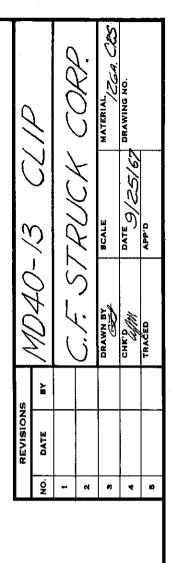


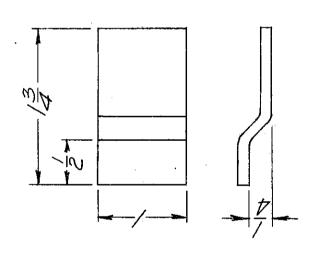

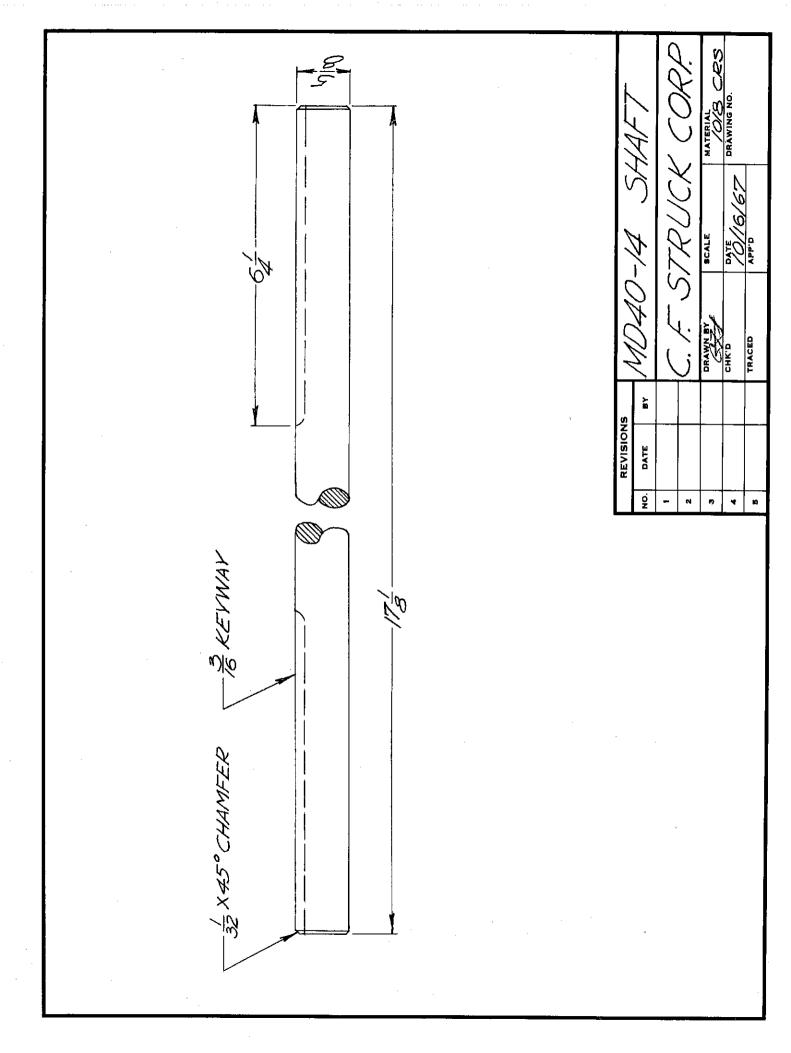


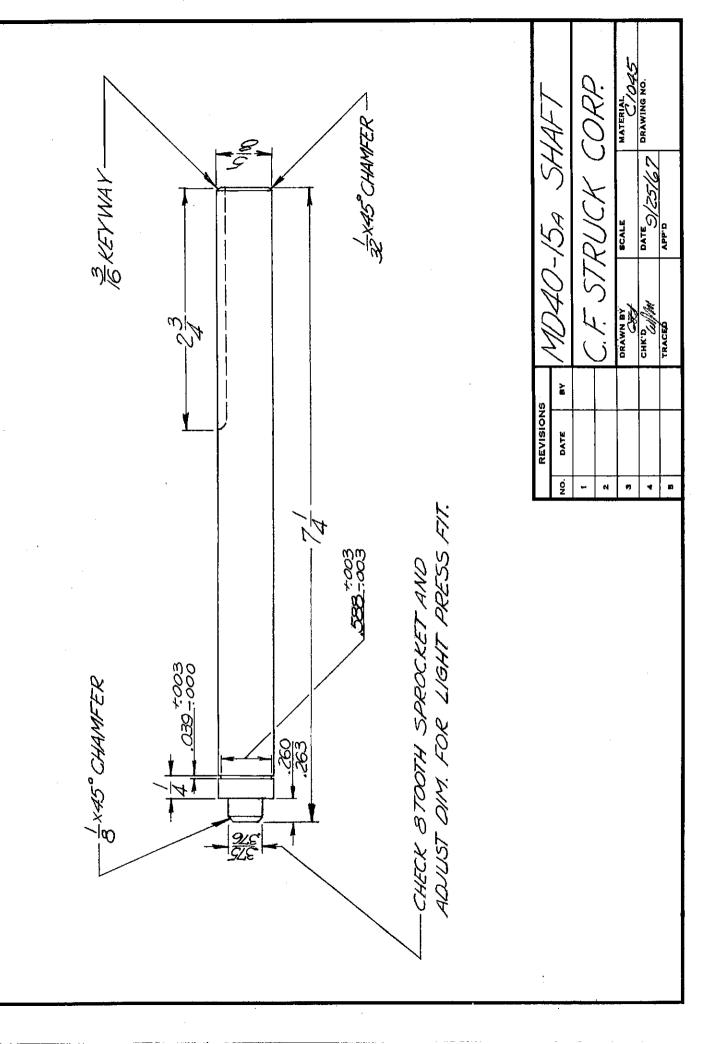



, ķ				
			•	
			l I	-
("				i
3/1] 		İ
		 		Ì
				i
) 	
			i	1
				1
	L			<u> </u>
			•	

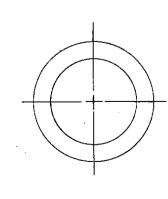


a	•	ü	N	-	NO.	
					DATE	REVISIONS
					ΥВ	5
TRAÇÃD APP'D	CHK,D WW. DV12/27/67	DRAWN TY SCALE	つ、イ リースクロイ	~ [STD/ 1/	11/1/1/1/1/	18/18/18
	`	MATERIAL // B/P	i	7 () 000	1000	7/107

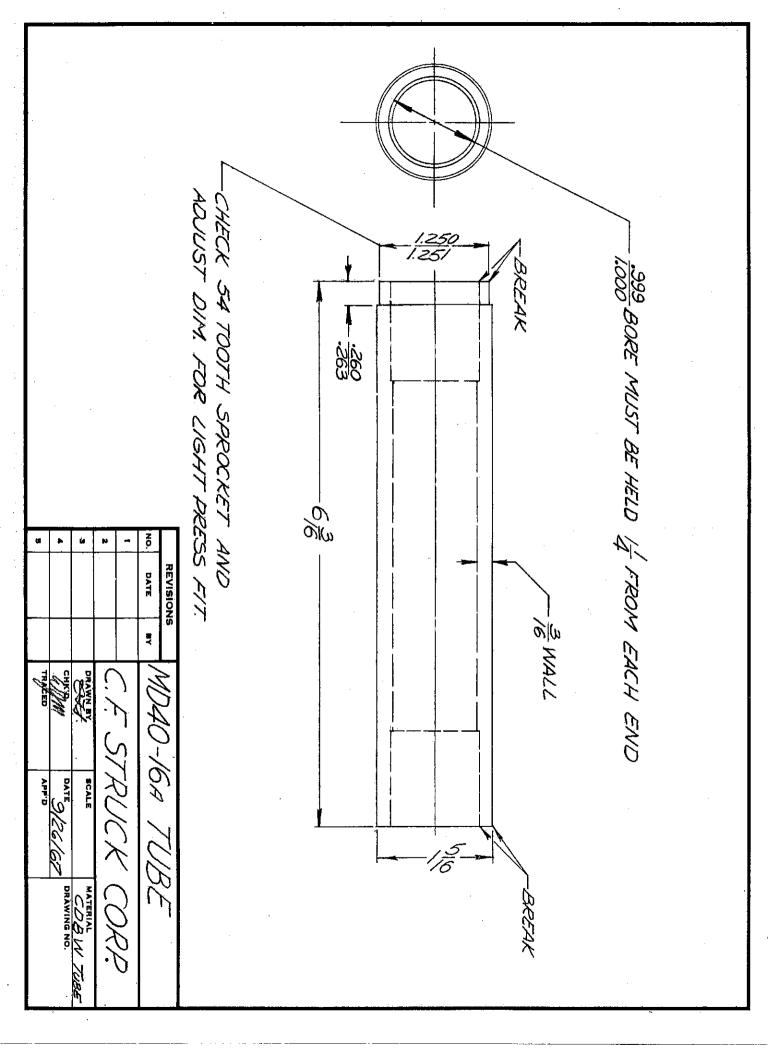


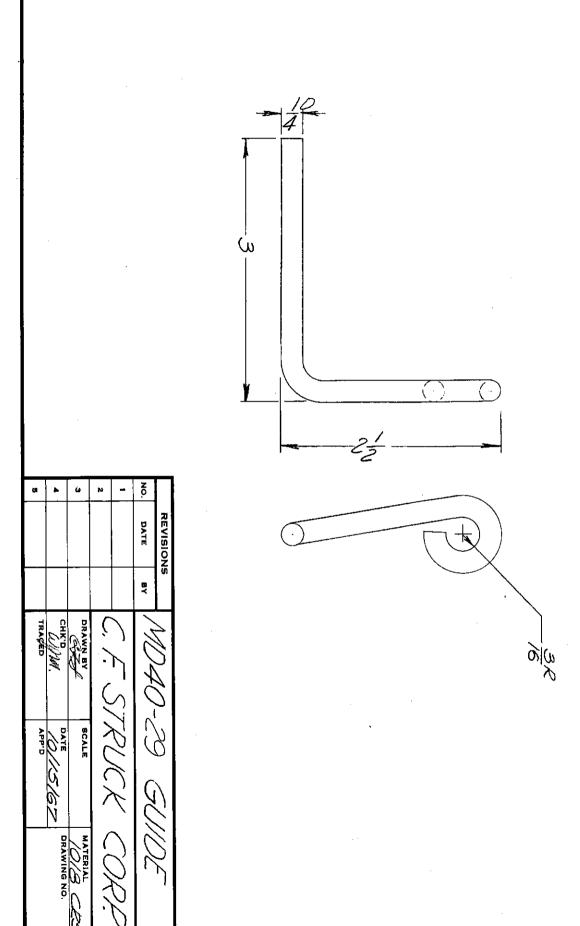

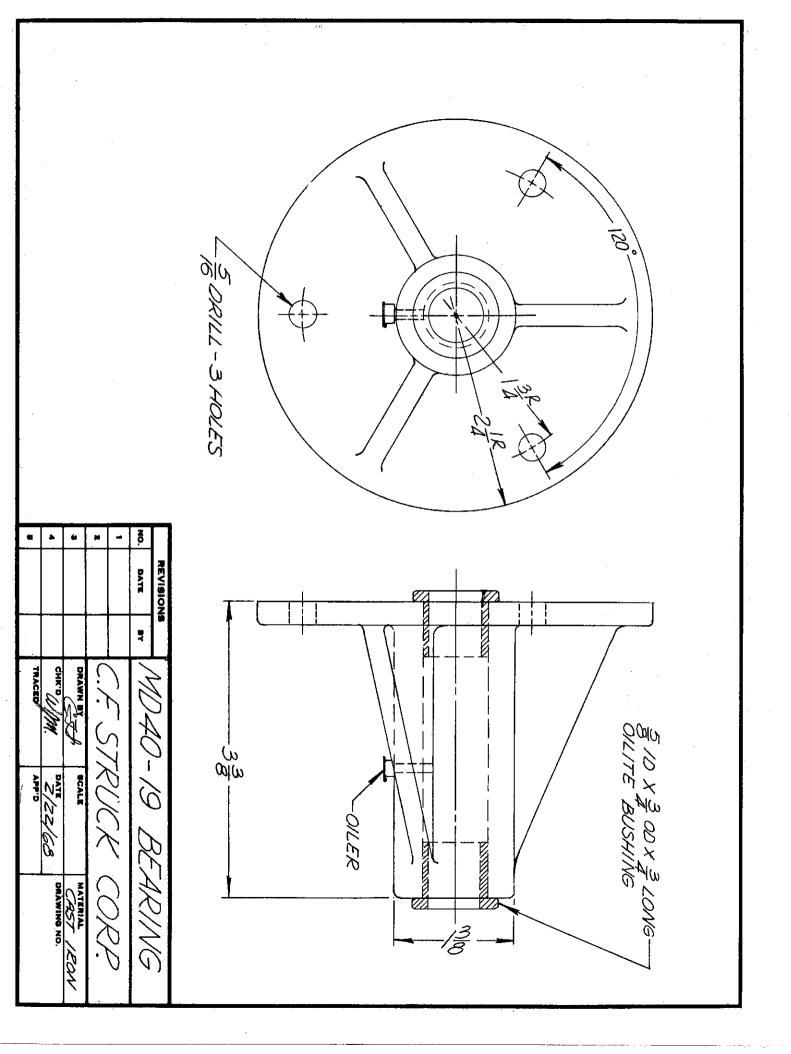

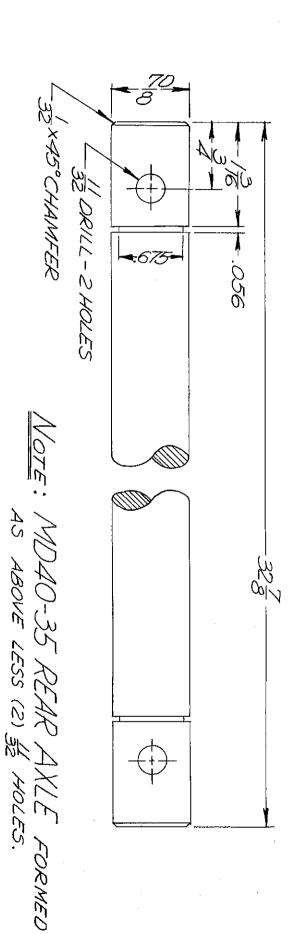



ĊE .			M	•	NO.	
					DATE	REVISIONS
					ΥB	S
TRACED / APP'D	CHK'D MM 2/22/68	DRAWN BY SCALE	C.F. OIKUCK	/	171040-JA FKU	7
	DRÀWING NO.	MATERIAL 1041 CRS	CUKT.	(200	JIVI HALC	

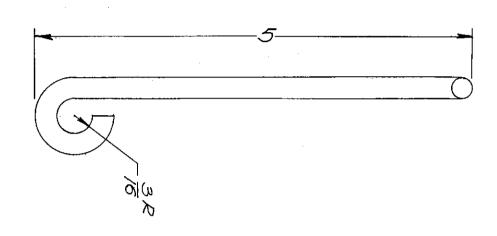

REVISIONS DATE BY DRAWN B GHK-D TRACED	
	2
MI BOALE STRUCTORY BOATE 2/2	
MATERIAL COK	


MATERIAL
10/8 C.E.S
DRAWING NO.

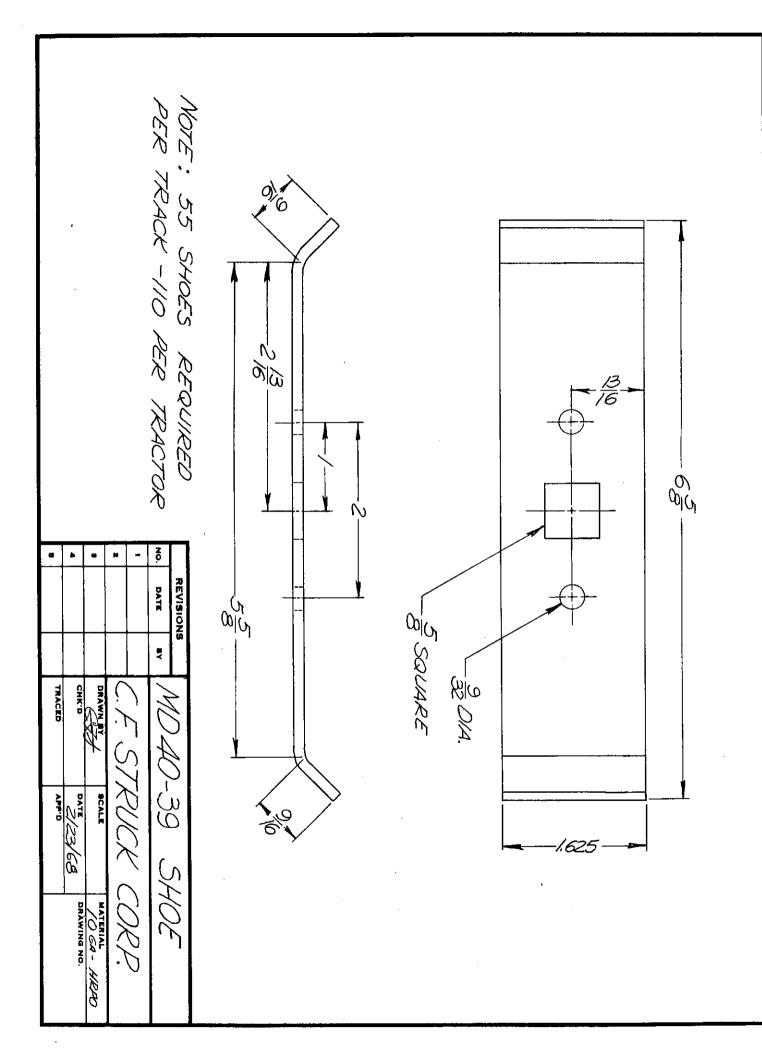

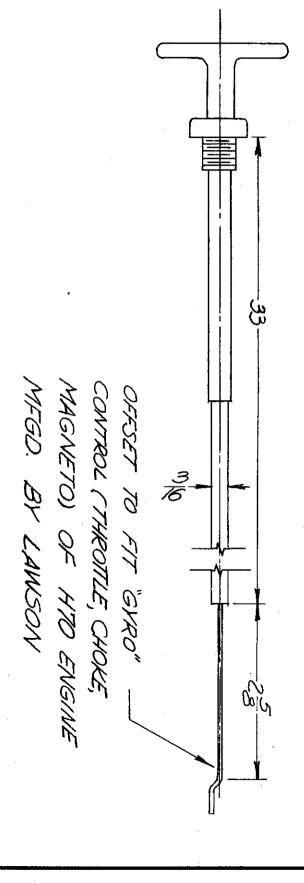


. 41	4	ú	N	-	NO.	
			•		DATE	REVISIONS
					₽Y	S
TRACED APP'D	CHK'D DATE 9/26/67	DRAWN BY SCALE	C. た ジャクこへ 。	1	19/1040-01 001	1
	DRAWING NO.	WESTERN "	CORK	700	VIKUL	170C/


NOTE: REVERSE LAYOUT BELOW FOR RIGHT (12R) CLUTCH:

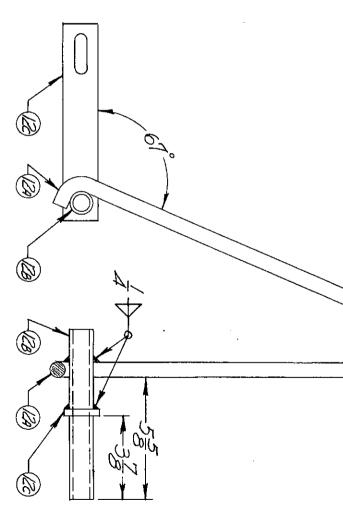



T	REVISIONS	5
NO.	D. DATE	₽Y


LAYOUT FOR LEFT (121) CLUTCH

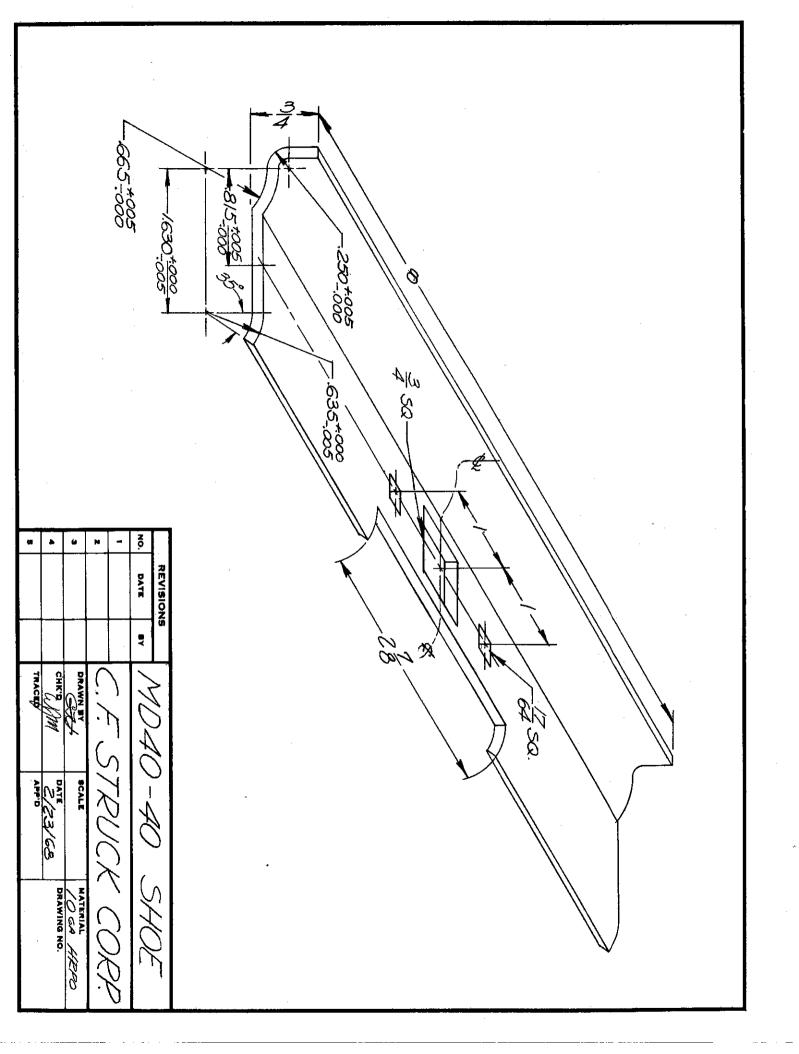

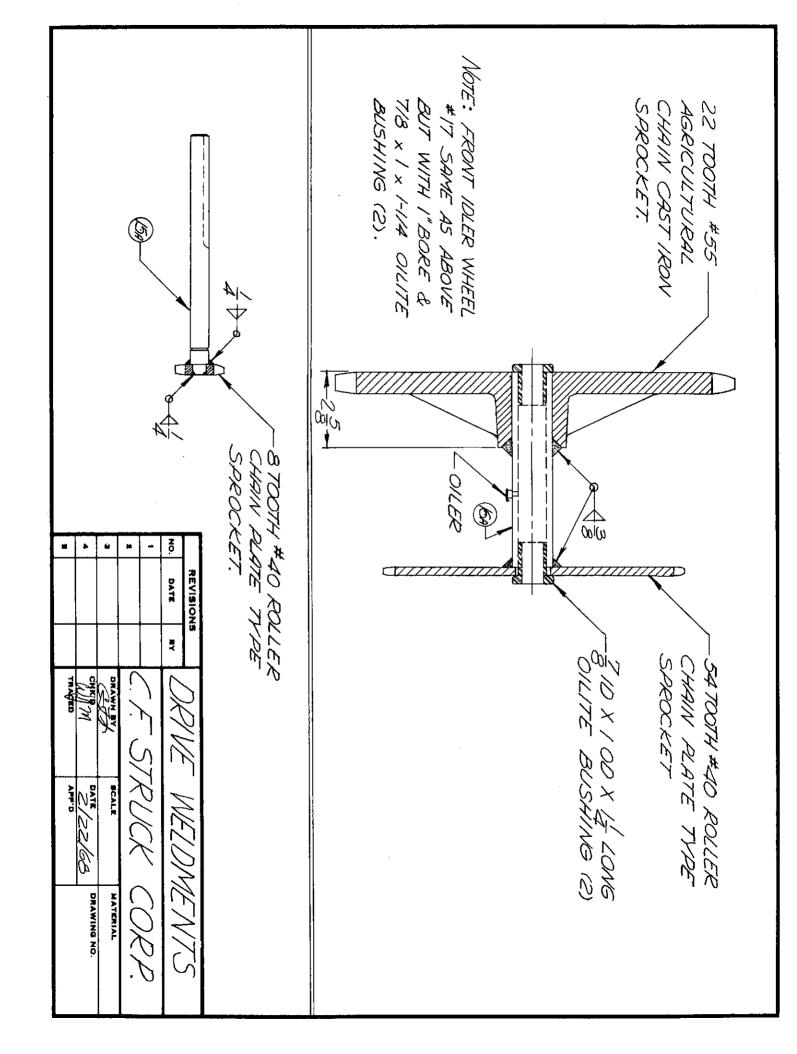

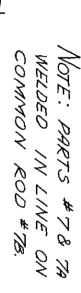

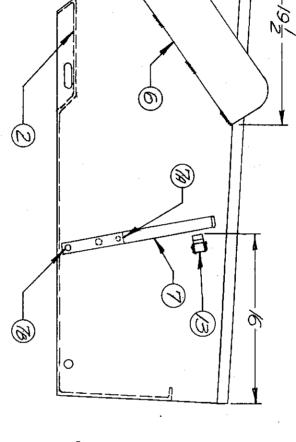

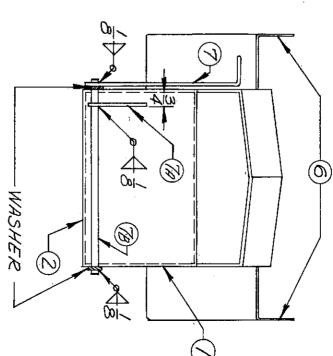

Γ	METIONS	Į.	るところ		レベルバインドへ
NO.	DATE	₽Y	DUN	WELL	VELUINEIVIO
-			(-) -/-	11/101	000
*			(.7. ()	O/KUCK	つ人人人
•			DRAWN BY	SCALE	MATERIAL
•			7		
•			CHK.D)////	DATE /23/68	DRAWING NO.
•			TRACED	APP.D	

